



## BLUE BAMBOO H50 GUIDE



<b>Current Versions.....</b>	<b>1</b>
<i>Verify the device has the correct versions installed.</i>	
<b>Device Name.....</b>	<b>2</b>
<i>Rename the device to have a unique name to simplify paring.</i>	
<b>Power Parameters.....</b>	<b>3</b>
<i>Reset power options to not power off.</i>	

## CURRENT VERSIONS



Turn on the device

At the following prompt:  
press the **Menu** button. Press Menu in  
3 Seconds  
To Activate  
Firmware Menu

Press **F1** and enter the password of **123456**, press **Enter**.

Make sure there is paper in the device

Select **3 - Diagnose** and press **Enter**  
Select **11 - Print Dev Inf** and press **Enter, Enter**

A receipt will print showing the current versions on the device

The most current versions are: **XIPVSTIPShell v2\_76**  
**CLDC\_1\_0\_1\_P**  
**BBSTip\_2\_1\_19\_P**  
**FONT0042**

## DEVICE NAME



Turn on the device

At the following prompt: Press Menu in  
3 Seconds  
To Activate

press the **Menu** button.

Press **F1** and enter the password of **123456**, press **Enter**.

- Select **1-Terminal Setup**, press **Enter**
- Select **4- Module Params**, press **Enter**
- Select **3- Bluetooth**, press **Enter**
- Select **7- My Name**, press **Enter**

It will show current name, use the keypad to change the name.

Press the **4** button 3 times to get **H**, Press **5**, and then **0**.

Press the **0** button 2 times to get **-**

Flip the device over and get the last 4 digits of the Serial #

Enter the last 4 numbers using the keypad, press **Enter**.

You should see the device name of H50-#### (last 4 of Serial #)

If you need to erase press the Clear button.

If you are typing the same number multiple times, pause in between numbers it so it moves to the next digit.

## POWER PARAMETERS



Turn on the device

At the following prompt:  
press the **Menu** button.

Press Menu in  
3 Seconds  
To Activate  
Firmware Menu

Press **F1** and enter the password of **123456**, press **Enter**.

Select **1-Terminal Setup**, press **Enter**  
Select **3-Power Params** press **Enter**  
Press **0**, **Enter** and **0**, **Enter**

This will disable both **Auto Stand By** and **Auto Power Off**.